
Vibration Control Products

Spring Hangers// Type SH/SHA

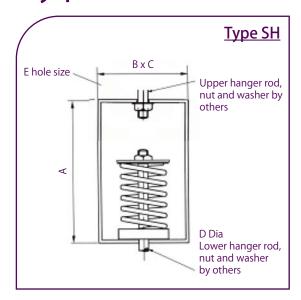


A load plate (suffix 'L') may be fitted to all hangers to hold the suspended load to a fixed position during installation.

Lock nut "B" (M24)

Lock nut "A" (M24)

Type SH spring hangers comprise steel springs mounted in a steel housing. The springs are retained between steel top and bottom load plates. Type SH requires the lower hanger rod to pass through the spring with the rod held on top of the spring with a nut and washer.

Type SHA is supplied with a drop rod passing through the spring fixed to the top of the spring with a nut. A tapped adaptor is supplied to fit in a drop rod by others.

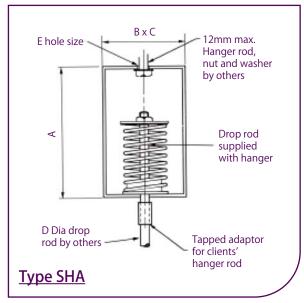

Dimensional Data mm						Weight Range	Nom Defl
Mount Type	Α	В	С	D	E	Kg	mm
SH/1/25/1	150	100	80	-	14	11-1100	25
SH/1/25/2	250	150	100	-	14	425-2400	25
SH/1/25/1	100	50	50	10	12	7-137	15
SH/1/25/2	150	100	80	12	12	11-228	25
SH/1/25/3	200	100	100	12	12	34-637	25
SH/1/50/1	250	150	80	12	18	11-454	50
SH/1/50/2	350	150	100	16	18	45-909	50
SH/1/75/1	250	150	80	12	18	11-454	75
SH/1/75/2	350	150	100	16	18	455-909	75
SH/1/100/1	370	210	180	12	14	11-299	100
SH/1/100/2	400	235	250	16	20	300-600	100
SH/1/100/3	485	260	300	16	20	601-1600	100